



**Frame Preparation (RHRB Application Shown)**

Drawing shows only one method of installation. Method of installation may vary per door & frame manufacturer.

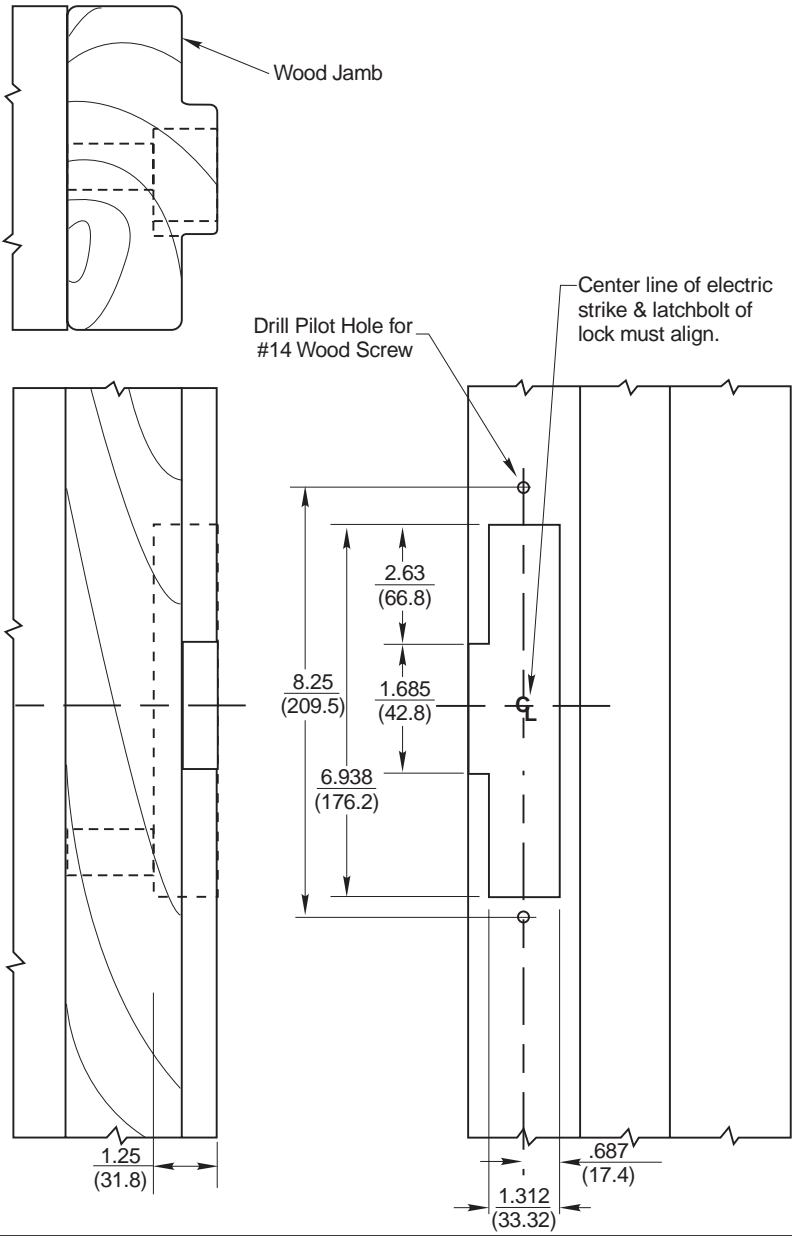


**Model 310-4W Electric Strike**

Dimension "A" (Keeper Position) is adjustable from .750 to .875. To adjust, loosen the two 12-24 strike mounting bolts, reposition strike, and retighten bolts.

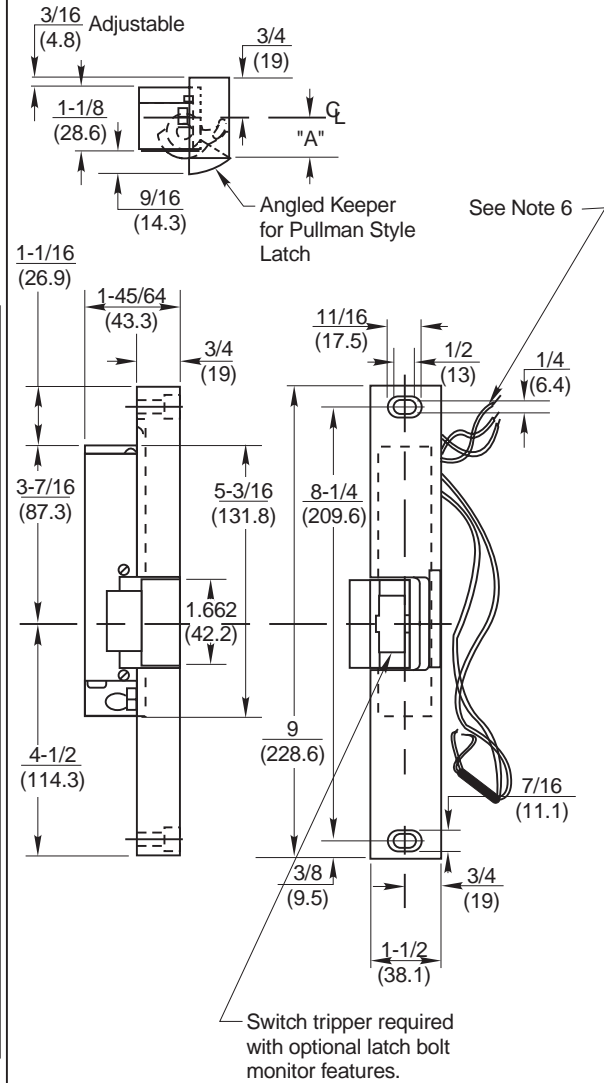

**NOTES:**

1. DO NOT SCALE - All dimensions in inches (mm).
2. Dimensions subject to change without notice.
3. Number of wires will vary per features of strike.
4. Cut off all excess wire not req'd for installation.
5. Wires to be run from side & rear of strike to conduit connection.
6. Locate rectifier as shown in assembly view. Make wire connections at end of strike where rectifier is stowed.
7. Refer to catalog for available finishes, voltages, & optional features.
8. Door & frame manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware.
9. Tolerances shown are for cutouts.

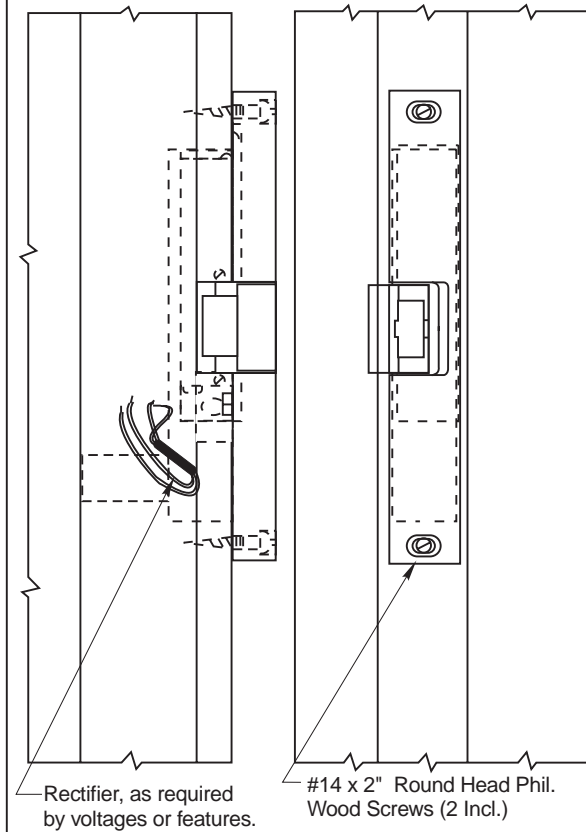

**310-4W Electric Strike  
Wood Jamb Mounted**



REF. REPAIR PART DWG.

P.O. BOX 25288, CHARLOTTE, NC 28229-8010

TEMPLATE NUMBER

**092-0245-046**

DATE

**9-98**