FRAME PREPARATION (RH / LHRB FRAME SHOWN)

Drawing shows ANSI mortise lock strike prep with face of frame modified for electric strike.

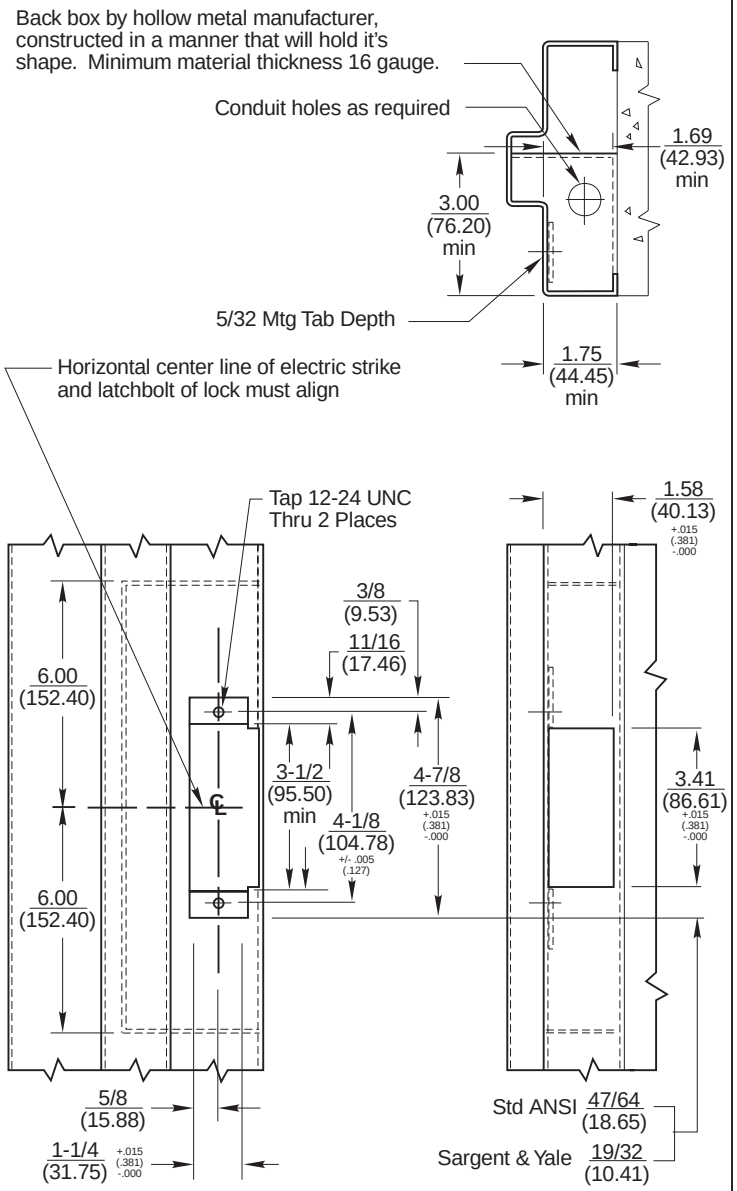

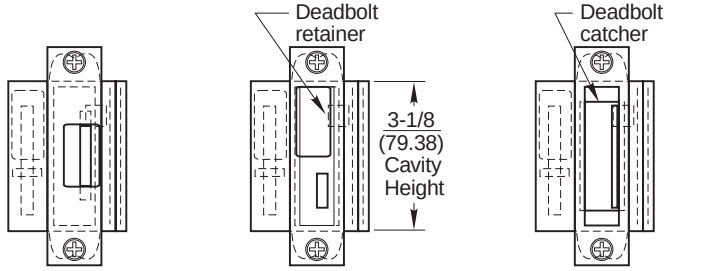

Model 642 RH Strike
For bored / cylindrical locksets only

Model 662 RH Strike
For latch & deadbolt combination locksets

Model 672 RH Strike
For normally extended deadbolt only locksets

MODEL 652 RH ELECTRIC STRIKE
(LH Faceplate Opposite)

Switch tripper illustrated with optional LBM switch. See catalog for all features.

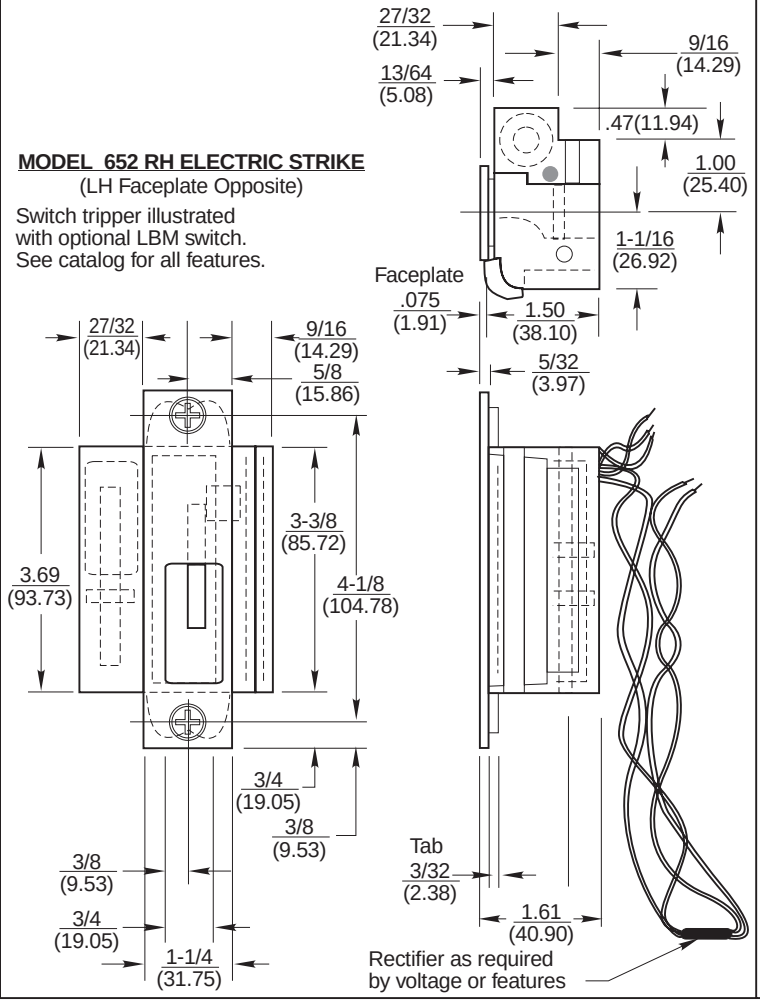

NOTES:

1. DO NOT SCALE - All dimensions in inches (mm).
2. Dimensions subject to change without notice.
3. Number of wires will vary per features of strike.
4. All wiring connections to be made opposite the solenoid end of strike. If a rectifier (optional) is used, it may be installed at either end of strike.
5. Wires to be run from end of strike to conduit connection.
6. Cut off all excess wire not required for installation.
7. Keeper position is adjustable. Set strike in desired position behind the faceplate and tighten the mounting screws securely.
8. Refer to catalog for available finishes, voltages, and optional features.
9. Door & frame manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown.
10. Tolerances shown are for cutouts.
11. Remove all burrs and break sharp edges.

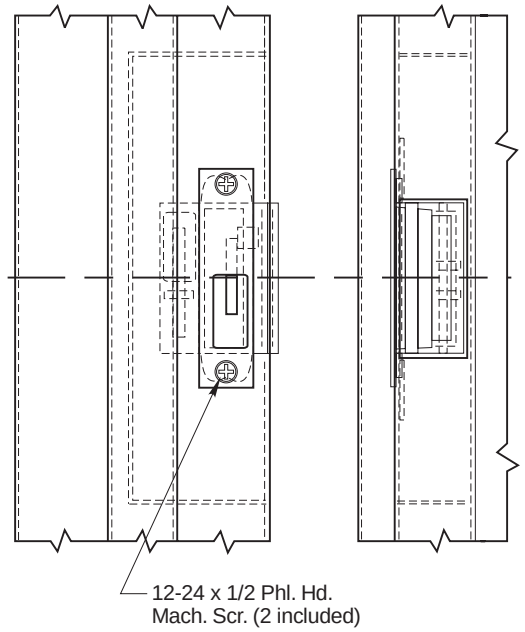

Standard Prep HM or Alum
642-652-662-672 Electric Strikes

FOLGER ADAM

REF. REPAIR PART DWG.

P.O. BOX 25288, CHARLOTTE, NC 28229-8010

TEMPLATE NUMBER **092-0250-029**

DATE **9-98**